


User Guide

AlmView v10 Window

Introduction

The AlmView v10 Window, shortened in this document to AlmView, is used for viewing and acknowledging alarms within an alarm store. Alarms can be sorted by priority (default), or by Date & Time, Device & Point, or Condition.

Your engineer has configured the window title, font, and colours, but the basic layout is show below.

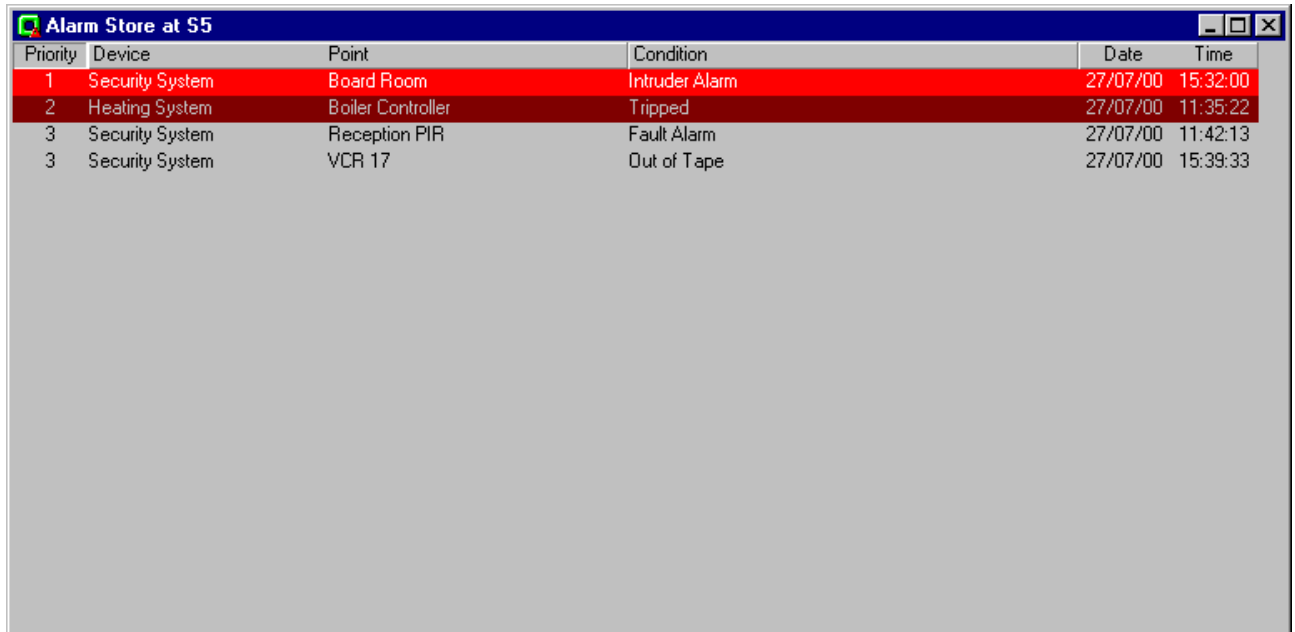

Priority	Device	Point	Condition	Date	Time
1	Security System	Board Room	Intruder Alarm	27/07/00	15:32:00
2	Heating System	Boiler Controller	Tripped	27/07/00	11:35:22
3	Security System	Reception PIR	Fault Alarm	27/07/00	11:42:13
3	Security System	VCR 17	Out of Tape	27/07/00	15:39:33

Remember: you may need to log on before you can acknowledge alarms.

Acknowledging alarms

Using a Mouse

Double-click on an alarm in the list to acknowledge that alarm. If security is enabled, and no user is logged on, then the alarm is not acknowledged; instead the user log-on window appears.

If enabled, you can action all alarms in the list by right-clicking on an alarm, and selecting <action> All option at the bottom of the menu

Using a Keyboard

Use the up-arrow and down-arrow keys to move the focus to a particular alarm, then press the [Enter] key to acknowledge the alarm with the focus rectangle. If security is enabled, and no user is logged on, then the alarm is not acknowledged; instead the user log-on window appears.

If enabled, you cal action all alarms in the list by holding the [Ctrl] key down whilst pressing the [Enter] key

Sorting Alarms

Click on the column heading to sort the alarms so that the entries beneath that column are in alphabetical or numeric order.

Starting Views

Right-click on an alarm to see a list of possible view options associated with that alarm; select one by clicking on the option.