



# The Protec Driver

---



The Protec driver connects to the Protec Fire Detection range of digital addressable fire control panels. Available for Commander and ObSys.

This document relates to Protec driver version 1.2 to 1.4

Please read the *Commander Manual* or *ObSys Manual* alongside this document, available from [www.northbt.com](http://www.northbt.com)


# Contents

Compatibility with the Protec System .....	3
Equipment .....	3
Values.....	3
Prerequisites.....	3
Using the Driver .....	4
Making the Cable .....	4
Starting the Interface .....	4
Setting up the Driver.....	5
Checking Communications .....	5
Alarms .....	6
Format.....	6
Examples.....	6
Point Field.....	6
Condition and Priority Field .....	7
Object Specifications.....	8
Example Object Reference .....	8
Device Top-Level Objects .....	8
Protec Driver Setup .....	9
6600 Series System .....	10
x400 Series System .....	10
x300 Series System .....	10
Zone & System Summary .....	11
Commands.....	12
Zone .....	13
6600 Series Panel.....	14
6600 Series Loop.....	15
x400 Series Panel.....	16
x300 Series Panel.....	17
x400/x300 Series Loop.....	18
Device.....	19
Protec Driver Setup (Historic version) .....	20
Driver Versions .....	21

# Compatibility with the Protec System

The Protec driver allows North to interface with a Protec Fire Detection system.

The driver connects to a Protec digital addressable fire control panel (Fig. 1), and can communicate with a network of panels.

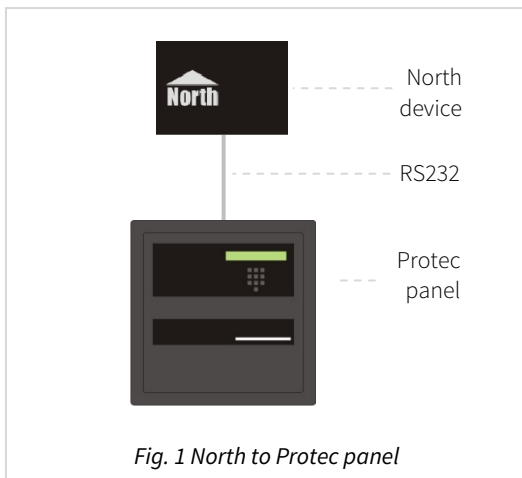

## Equipment

Protec Fire Detection control panels compatible with the driver include:

- Algo-tec 6500/6600/6700 series
- Algo-tec 5400/6400 series
- Algo-tec 6300 and AN95

## Values

Depending on the series of fire control panel, the driver can typically access the following values:

- Reset panel
- Sounders
- Date & Time
- System state
- Panel state
- Loop state
- Loop device state
- Zone state
- Output group (5400/6400 and 6500/6600/6700 series only)
- Damper state (5400/6400 and 6500/6600/6700 series only)

States for fire, pre-alarm, fault, and isolation conditions are available.

Fire control panels can send alarms to the Protec driver.

## Prerequisites

**Algo-tec 6300 panel only:** this has limited capacity when communicating that a large number of devices have changed state. Typically, this is when all devices in a zone have been isolated/de-isolated. After this type of operation, use the Resync Driver object (RST) to re-synchronise the driver with the Protec system.

The Algo-tec 6300 panel uses a 600 baud serial connection. On Commander, this requires version 2.0 build 15/06/16 or later.

# Using the Driver

On ObSys and Commander, the Protec driver is pre-installed. On both these North devices, you can use the driver to create an interface to Protec. Once started, you will need to set up the driver before it can communicate with the Protec system.

## Making the Cable

Using the RS232 cable specification (Fig. 2), connect the North device COM port to the Protec panel DB9 port.

### Algo-tec 6500/6600/6700 panels:


The COM port, labelled 'RS232', is located on the main backplane PCB.

### Algo-tec 5400/6300/6400 panels:

The COM port, labelled 'Graphics port', is located on the inside of the panel at the hinge-edge of the door, facing the hinge itself. Not to be confused with 'Commissioning Port 1', which faces inwards from the door.

Protec may supply an RS232 opto-isolator device with the panel. On the Commander platform, this is not required as Commander's RS232 ports are isolated. The cable connecting pins 4 & 7 is only required when an opto-isolator is used.

Connector types at each end of the cable are shown.

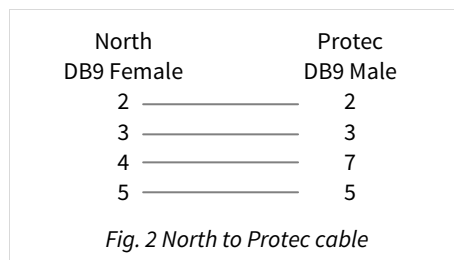

Cables are available from North, order code CABLE/PROTEC.


The maximum RS232 cable length is 15m.

## Starting the Interface

- 📖 To start an interface using the Protec driver, follow these steps:
  - **Start Engineering** your North device using ObSys
  - Navigate to **Configuration, Interfaces**, and set an unused **Interface** to 'Protec' to start the particular interface
  - Navigate to the top-level of your North device and re-scan it

The driver setup object (Mc), labelled **Protec Setup**, should now be available. If this object is not available, check an interface licence is available and the driver is installed.

## Setting up the Driver

-  To set up the driver, follow these steps:
- Navigate to the **Protec Setup** object (Mc). For example, if you started interface 1 with the driver earlier, then the object reference will be 'M1'
  - Set the **RS232 COM Port** (RS.COM) to select the serial port number on the North device the panel is connected to
  - Set the **Baud Rate** (RS.BR) to match that of the Protec panel graphics port
  - Set the **Panel Type** (P.T) to match the series of panel the driver is connected to. Set this to '6500/6600/6700', '5400/6400', or 'AN95/6300'.

## Checking Communications

The **Protec Setup** object contains a **Comms Online** (DS) objects. A value of 'Yes' indicates the driver has connected to, and is communicating with the Protec system.

# Alarms

When the Protec system reports an event to the driver, the driver sends a North-format alarm to the device's alarm processing.

## Format

North-format alarms contain six text fields. The Protec driver places the following information into these fields:

**System** – copied from System Label object (DL) within driver setup

**Point** – see Point Field section below

**Condition** – see Condition and Priority Field section below

**Priority** – see Condition and Priority Field section below

**Date & Time** – from connected panel

## Examples

System	Point	Condition	Priority	Date	Time
Protec System	Zone 1	Isolated	2	10/03/14	14:29:48
Protec System	Zone 1	De-Isolated	2	10/03/14	14:35:12
Protec System	Panel 12 Loop 1 Dev 12 Zone 12	Pre-Alarm	2	10/03/14	14:26:26
Protec System	Panel 2 Loop 1 Dev 1 Zone 16	Fire	1	10/03/14	15:06:59
Protec System	Panel 2	Alarms Silenced	3	10/03/14	15:07:35
Protec System	Panel 2	Reset	1	10/03/14	15:07:40
Protec System	Panel 2 Loop 1 Dev 1 Zone 16	Fire Cleared	1	10/03/14	15:07:40
Protec System	Panel 12 Loop 1 Dev 12 Zone 12	Pre-Alarm Cleared	2	10/03/14	16:26:26

## Point Field

Selected by **Alarm Point Field** object (AT) within driver setup.

If 'PLD reference' option is selected, Point Field contains:

System

Panel *a*

Panel *a* Loop *b*

Panel *a* Loop *b* Dev *c*

Panel *a* Loop *b* Dev *c* Zone *d*

Zone *d*

System

If 'Detector label' option is selected, Point Field contains:

*device location* from the panel

'Panel *a*' + *device location*

## Condition and Priority Field

The following alarm conditions can be sent by the driver:

Active Condition	Inactive Condition	Priority
Fire	Fire Cleared	1
	Reset	1
RS232 Comms Failure	RS232 Comms Failure Cleared	1
Isolated	De-Isolated	2
Pre-Alarm	Pre-Alarm Cleared	2
Alarm Fault	Alarm Fault Cleared	3
Evacuate		3
	Alarms Silenced	3
Aux 24V Supply Fault	Aux 24V Supply Fault Cleared	3
Earth Fault	Earth Fault Cleared	3
Fault	Fault Cleared	3
RS485 Fault	RS485 Fault Cleared	3
Signalling Error	Signalling Error Cleared	3
Supply Fault	Supply Fault Cleared	3
System Fault	System Fault Cleared	3
System Fault: Clock	System Fault Cleared	3
System Fault: EEPROM	System Fault Cleared	3
System Fault: Event	System Fault Cleared	3
System Fault: Flash	System Fault Cleared	3
System Fault: IO	System Fault Cleared	3
System Fault: LCD	System Fault Cleared	3
System Fault: LDU	System Fault Cleared	3
System Fault: Local	System Fault Cleared	3
System Fault: Menu	System Fault Cleared	3
System Fault: Printer	System Fault Cleared	3
System Fault: Software	System Fault Cleared	3
Type Fault	Type Fault Cleared	3
Zone Fault	Zone Fault Cleared	3
Alarms Outputs Disabled	Alarms Outputs Enabled	4
Buzzer Isolated	Buzzer De-Isolated	4
Control Outputs Disabled	Control Outputs Enabled	4
Device Added	Device Added Cleared	4
Engineer Test	Engineer Test Cleared	4
Event Accepted		4
Fault Links Disabled	Fault Links Enabled	4
Fire Links Disabled	Fire Links Enabled	4
Fire Protection Disabled	Fire Protection Enabled	4
High-Level Access Login	High-Level Access Logout	4
Initialisation	Initialisation Cleared	4
	Missing Loop Devices	4
Non-Fire Outputs Disabled	Non-Fire Outputs Enabled	4

A panel may not send all conditions listed.

Zone isolations may indicate a part isolation by appending the condition with '(Auto)' to indicate automatic detection devices, or '(MCP)' to indicate manually operated devices.

# Object Specifications

Once an interface has been started, one or more extra objects become available within the top-level object of the device. As with all North objects, each of these extra objects may contain sub-objects, (and each of these may contain sub-objects, and so on) - the whole object structure being a multi-layer hierarchy. It is possible to navigate around the objects using the ObSys Engineering Software.

Each object is specified below, along with its sub-objects.

## Example Object Reference

An example of a reference to an object in the same device: the Protec System (S1) contains Panel 1 (P1), which contains Loop 2 (L2), which has Device 22 (D22), which contains an alarm state (C). Therefore, the complete object reference will be 'S1.P1.L2.D22.C'.

An example of a reference to an object in a different device: the IP network object (IP) contains Default Commander object (CDIP), which contains the object above (S1.P1.L2.D22.C) – therefore the complete object reference is 'IP.CDIP.S1.P1.L2.D22.C'.

## Device Top-Level Objects

When an interface is started using the Protec driver, the objects below become available within the top-level object of the device. For example, if Interface 1 is started, then the object with references 'M1' and 'S1' become available.

Description	Reference	Type
<b>Protec Setup</b> Set up the Protec driver, started on interface c (c is the interface number)	Mc	Fixed Container: On the Commander platform this will be <i>[CDM v20\Protec v14]</i> On the ObSys platforms this will be <i>[OSM v20\Protec v14]</i>
<b>Protec System</b> Access Protec system connected to interface c (c is the interface number)	Sc	Fixed Container: On a 6600 series panel network this will be <i>[Protec v14\6600]</i> On a x400 series panel network this will be <i>[Protec v14\X400]</i> On a x300/AN95 series panel network this will be <i>[Protec v14\AN95]</i>



# Protec Driver Setup

Object Type: [OSM v20\Protec v14]

Object Type: [CDM v20\Protec v14]

The Protec driver contains the following objects:

Description	Reference	Type
<b>RS232 COM port</b>	RS.COM	Obj\Num: 1...8; Adjustable
<b>Baud rate</b> Baud rate of the connected fire panel, typically 9600 or 19200 baud. Algo-tec 6300 panels use 600 baud.	RS.BR	Obj\Num: 600...19200; Adjustable
<b>System label</b> Label displayed when scanning the system and within alarms	DL	Obj\Text: 20 Chars; Adjustable
<b>Comms online</b> Indicates whether communication is established with the panel	DS	Obj\NoYes
<b>Panel type</b> Select the series of Protec panel connected	P.T	Obj\Enum: 0...1; Adjustable Where: 0=AN95/6300, 1=5400/6400, 2=6500/6600/6700
<b>Alarm point field</b> Selects source of the alarm message point field. When set to '1' (Label from panel), alarms sent include the panel/loop/device label if provided from the panel	AT	Obj\Enum: 0...1; Adjustable Where: 0=PLD reference,1=Label from panel
<b>Alarm include Panel</b> Prefixes loop and device alarms with the panel number, when Alarm point field (AT) is set '1' (Label from panel)	AP	Obj\NoYes; Adjustable
<b>Ignore isolations</b> Enable to ignore isolation events from the system. This provides more event storage for fire and fault conditions	II	Obj\NoYes; Adjustable
<b>Enable damper events</b> Enable to receive damper state events from the system.	EDP	Obj\NoYes; Adjustable
<b>Enable platform time sync</b> Enable to set the North device's date and time when commanded from the Protec system.	ETD	Obj\NoYes; Adjustable
<b>Event storage available</b> Each event from the system must be remembered by the driver. <b>If no storage is available for a new event, the driver will not be able to remember it.</b>	SC	Obj\Num: 0...800
<b>Resync driver</b> Clears the internal database and re-requests the current state from the Protec system	RST	Obj\NoYes; Adjustable

## 6600 Series System

Object Type: *[Protec v14\6600]*

The Protec series 6600 system is a network of Protec 6500, 6600, or 6700 fire detection panels. It contains objects to view the status of the whole system (P) and objects to access information from each connected panel (Px).

Description	Reference	Type
<b>Zone &amp; System Summary</b>	P	Fixed container can be one of the following types: <i>[Protec v14\6600\System]</i>
<b>Panel x</b> The panel number, x, can be in the range 1...160	Px	Fixed container, can be one of the following types: <i>[Protec v14\6600\Panel]</i>

## x400 Series System

Object Type: *[Protec v14\X400]*

Object Type: *[Protec v13\X400]*

Object Type: *[Protec v12\5400]*

The Protec series x400 system is a network of Protec 6400 or 5400 fire detection panels. It contains objects to view the status of the whole system (P) and objects to access information from each connected panel (Px).

Description	Reference	Type
<b>Zone &amp; System Summary</b>	P	Fixed container can be one of the following types: <i>[Protec v14\X400\System]</i>
<b>Panel x</b> The panel number, x, can be in the range 1...99	Px	Fixed container, can be one of the following types: <i>[Protec v14\X400\Panel]</i>

## x300 Series System

Object Type: *[Protec v14\AN95]*

Object Type: *[Protec v13\AN95]*

Object Type: *[Protec v12\AN95]*

The Protec series x300 system is a network of Protec 6300 or AN95 fire detection panels. It contains objects to view the status of the whole system (P) and objects to access information from each connected panel (Px).

Description	Reference	Type
<b>Zone &amp; System Summary</b>	P	Fixed container can be one of the following types: <i>[Protec v14\AN95\System]</i>
<b>Panel x</b> The panel number, x, can be in the range 1...64	Px	Fixed container, can be one of the following types: <i>[Protec v14\AN95\Panel]</i>

## Zone & System Summary

Object Type: [Protec v14\6600\System]

Object Type: [Protec v14\X400\System]

Object Type: [Protec v14\AN95\System]

Object Type: [Protec v13\X400\System]

Object Type: [Protec v13\AN95\System]

Object Type: [Protec v12\5400\System]

Object Type: [Protec v12\AN95\System]

The Protec Zone and System Summary object contains zone and network-wide status for the Protec system. Objects are also available to perform network-wide commands – reset, silence, etc.

Description	Reference	Type
<b>Commands</b> Contains objects for resetting latched events, and silencing sounders	A	Fixed Container: On a 6600 series panel network this will be [Protec v14\6600\Actions] On a x400 series panel network this will be [Protec v14\X400\Actions] On a x300 series panel network this will be [Protec v14\AN95\Actions]
<b>Date and Time</b> Set the system date and time	TIME	Obj\DateTime; Adjustable
<b>System Alarm State</b>	C	Obj\Enum: 0..4 Where: 0=OK,1=Isolate,2=Fault,3=Pre-alarm,4=Fire
<b>System Ok</b>	C0	Obj\NoYes
<b>Isolation</b>	C1	Obj\NoYes
<b>MCP Devices Isolated</b> Indicates one or more manual call-point devices within the zone are isolated	C1.M	Obj\NoYes
<b>Auto Devices Isolated</b> Indicates one or more automatic detection devices within the zone are isolated	C1.A	Obj\NoYes
<b>Fault</b>	C2	Obj\NoYes
<b>Pre-Alarm</b>	C3	Obj\NoYes
<b>Fire</b>	C4	Obj\NoYes
<b>Zone x</b> The zone number, x, is in the range 1..800 for x400 panels; and 1..255 for x300 panels	Zx	Fixed container: [Protec v14\Zone]

## Compatibility Objects

The Protec system also contains the following objects for backward compatibility.

Description	Reference	Type
<b>System Value</b> System alarm state	V1	Obj\Enum Value: 0=OK, 8=Damper activated, 10=Earth fault, 12=System fault, 13=Supply fault, 15=Detector fault, 16=Loop fault, 19=Alarms sounding, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire
<b>Devices in Fault b condition</b> The fault condition, b, is in the range 8..22, where: 8=Damper activated, 10=Earth fault, 12=System fault, 13=Supply fault, 15=Detector fault, 16=Loop fault, 19=Alarms sounding, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire	Fb	Obj\NoYes

# Commands

Object Type: [Protec v14\6600\Actions]

Object Type: [Protec v14\X400\Actions]

Object Type: [Protec v14\AN95\Actions]

Object Type: [Protec v13\X400\Actions]

Object Type: [Protec v13\AN95\Actions]

Object Type: [Protec v12\5400\Actions]

Object Type: [Protec v12\AN95\Actions]

A Protec Command object allows an action to be set within the Protec system:

Description	Reference	Type
<b>Reset</b> Performs a reset on the panel	R	Obj\NoYes; Adjustable only
<b>Sounders</b> Silences or re-sounds the sounders	S	Obj\OffOn
<b>Accept</b> Accept alarms, and silence the panel buzzer. Object available in x400 series panels only	A	Obj\NoYes; Adjustable only

# Zone

Object Type: [Protec v14\Zone]

Object Type: [Protec v13\Zone]

Object Type: [Protec v12\Zone]

A Protec zone contains the following objects:

Description	Reference	Type
<b>Zone Alarm State</b>	C	Obj\Enum: 0...4; Where: 0=Ok, 1=Isolated, 2=Fault, 3=Pre-Alarm, 4=Fire
<b>Zone OK</b>	C0	Obj\NoYes
<b>Zone Devices Isolated</b> Indicates one or more devices within the zone are isolated	C1	Obj\NoYes
<b>Zone MCP Devices Isolated</b> Indicates one or more manual call-point devices within the zone are isolated	C1.M	Obj\NoYes
<b>Zone Auto Devices Isolated</b> Indicates one or more automatic detection devices within the zone are isolated	C1.A	Obj\NoYes
<b>Zone Devices in Fault</b>	C2	Obj\NoYes
<b>Zone Devices in Pre-Alarm</b>	C3	Obj\NoYes
<b>Zone Devices in Fire</b>	C4	Obj\NoYes

## Compatibility Objects

A Protec zone also contains the following objects for backward compatibility.

Description	Reference	Type
<b>Zone Value</b> Zone alarm state	V1	Obj\Enum Value: 0=OK, 8=Damper activated, 15=Detector fault, 16=Loop fault, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire
<b>Zone Devices in Fault <i>b</i> condition</b> The fault condition, <i>b</i> , is in the range 8...22, where: 8=Damper activated, 15=Detector fault, 16=Loop fault, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire	F <i>b</i>	Obj\NoYes

# 6600 Series Panel

Object Type: [Protec v14\6600\Panel]

A Protec 6600 series panel contains the following objects:

Description	Reference	Type
<b>Panel Alarm State</b>	C	Obj\Enum: 0...4 Where: 0=Ok,1=Isolate,2=Fault,3=Pre-alarm,4=Fire
<b>Panel Ok</b>	C0	Obj\NoYes
<b>Isolation</b>	C1	Obj\NoYes
<b>Fault</b>	C2	Obj\NoYes
<b>Pre-Alarm</b>	C3	Obj\NoYes
<b>Fire</b>	C4	Obj\NoYes
<b>Loop x</b> The Loop number, x, is in the range 1...4	Lx	Fixed container: [Protec v14\6600\Loop]
<b>Override Output Group y</b> The Output Group number, y, is in the range 1...255. Use output groups to control devices connected to the panel, including damper state. All override states revert to 'Automatic' (3) after a panel reset.	Oy	Obj\Enum: 0...3; Adjustable only Where: 0=Override to Off, 1=Override to On, 2=Override to Alert (for pulsing fire alarm devices only), 3=Automatic (release override)

## Compatibility Objects

A Protec panel also contains the following objects for backward compatibility.

Description	Reference	Type
<b>Panel Value</b> Panel alarm state	V1	Obj\Enum Value: 0=OK, 8=Damper activated, 10=Earth fault, 12=System fault, 13=Supply fault, 15=Detector fault, 16=Loop fault, 19=Alarms sounding, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire
<b>Devices in Fault b condition</b> The fault condition, b, is in the range 8...22, where: 8=Damper activated, 10=Earth fault, 12=System fault, 13=Supply fault, 15=Detector fault, 16=Loop fault, 19=Alarms sounding, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire	Fb	Obj\NoYes

## 6600 Series Loop

Object Type: [Protec v14\6600\Loop]

A Protec panel loop contains the following objects:

Description	Reference	Type
<b>Loop Alarm State</b>	C	Obj\Enum: 0...4; Where: 0=Ok, 1=Isolated, 2=Fault, 3=Pre-Alarm, 4=Fire
<b>Loop Ok</b>	C0	Obj\NoYes
<b>Loop Devices Isolated</b> Indicates one or more devices are isolated	C1	Obj\NoYes
<b>Loop/Devices in Fault</b>	C2	Obj\NoYes
<b>Loop Devices in Pre-Alarm</b>	C3	Obj\NoYes
<b>Loop Devices in Fire</b>	C4	Obj\NoYes
<b>Device x</b> The device address, x, is in the range 1...512	Dx	Fixed container: [Protec v14\Dev]

## Compatibility Objects

A Protec loop also contains the following objects for backward compatibility.

Description	Reference	Type
<b>Loop Value</b> Loop alarm state	V1	Obj\Enum Value: 0=OK, 8=Damper activated, 13=Supply fault, 15=Detector fault, 16=Loop fault, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire
<b>Loop Devices in Fault b condition</b> The fault condition, b, is in the range 8...22, where: 8=Damper activated, 13=Supply fault, 15=Detector fault, 16=Loop fault, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire	Fb	Obj\NoYes

## x400 Series Panel

Object Type: *[Protec v14\X400\Panel]*

Object Type: *[Protec v13\X400\Panel]*

Object Type: *[Protec v12\5400\Panel]*

A Protec x400 series panel contains the following objects:

Description	Reference	Type
<b>Panel Alarm State</b>	C	Obj\Enum: 0...4 Where: 0=Ok,1=Isolate,2=Fault,3=Pre-alarm,4=Fire
<b>Panel Ok</b>	C0	Obj\NoYes
<b>Isolation</b>	C1	Obj\NoYes
<b>Fault</b>	C2	Obj\NoYes
<b>Pre-Alarm</b>	C3	Obj\NoYes
<b>Fire</b>	C4	Obj\NoYes
<b>Loop x</b> The Loop number, <i>x</i> , is in the range 1...4 on x400 panels	Lx	Fixed container: <i>[Protec v14\X400\Loop]</i>
<b>Override Output Group y</b> The Output Group number, <i>y</i> , is in the range 1...255. Use output groups to control devices connected to the panel, including damper state. All override states revert to 'Automatic' (3) after a panel reset.	Oy	Obj\Enum: 0...3; Adjustable only Where: 0=Override to Off, 1=Override to On, 2=Override to Alert (for pulsing fire alarm devices only), 3=Automatic (release override)

## Compatibility Objects

A Protec panel also contains the following objects for backward compatibility.

Description	Reference	Type
<b>Panel Value</b> Panel alarm state	V1	Obj\Enum Value: 0=OK, 8=Damper activated, 10=Earth fault, 12=System fault, 13=Supply fault, 15=Detector fault, 16=Loop fault, 19=Alarms sounding, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire
<b>Devices in Fault b condition</b> The fault condition, <i>b</i> , is in the range 8...22, where: 8=Damper activated, 10=Earth fault, 12=System fault, 13=Supply fault, 15=Detector fault, 16=Loop fault, 19=Alarms sounding, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire	Fb	Obj\NoYes



# x300 Series Panel

Object Type: *[Protec v14\AN95\Panel]*

Object Type: *[Protec v13\AN95\Panel]*

Object Type: *[Protec v12\AN95\Panel]*

A Protec x300 series panel contains the following objects:

Description	Reference	Type
<b>Panel Alarm State</b>	C	Obj\Enum: 0...4 Where: 0=Ok,1=Isolate,2=Fault,3=Pre-alarm,4=Fire
<b>Panel Ok</b>	C0	Obj\NoYes
<b>Isolation</b>	C1	Obj\NoYes
<b>Fault</b>	C2	Obj\NoYes
<b>Pre-Alarm</b>	C3	Obj\NoYes
<b>Fire</b>	C4	Obj\NoYes
<b>Loop x</b> The Loop number, x, is in the range 1...8 on x300 panels	Lx	Fixed container: <i>[Protec v14\AN95\Loop]</i>

## x400/x300 Series Loop

Object Type: [Protec v14\X400\Loop]

Object Type: [Protec v14\AN95\Loop]

Object Type: [Protec v13\Loop]

Object Type: [Protec v12\Loop]

A Protec panel loop contains the following objects:

Description	Reference	Type
<b>Loop Alarm State</b>	C	Obj\Enum: 0...4; Where: 0=Ok, 1=Isolated, 2=Fault, 3=Pre-Alarm, 4=Fire
<b>Loop Ok</b>	C0	Obj\NoYes
<b>Loop Devices Isolated</b> Indicates one or more devices are isolated	C1	Obj\NoYes
<b>Loop/Devices in Fault</b>	C2	Obj\NoYes
<b>Loop Devices in Pre-Alarm</b>	C3	Obj\NoYes
<b>Loop Devices in Fire</b>	C4	Obj\NoYes
<b>Device x</b> The device address, x, is in the range 1...127	Dx	Fixed container: [Protec v14\Dev]

## Compatibility Objects

A Protec loop also contains the following objects for backward compatibility.

Description	Reference	Type
<b>Loop Value</b> Loop alarm state	V1	Obj\Enum Value: 0=OK, 8=Damper activated, 13=Supply fault, 15=Detector fault, 16=Loop fault, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire
<b>Loop Devices in Fault b condition</b> The fault condition, b, is in the range 8...22, where: 8=Damper activated, 13=Supply fault, 15=Detector fault, 16=Loop fault, 20=Devices Isolated, 21=Pre-Alarm, 22=Fire	Fb	Obj\NoYes

# Device

Object Type: [Protec v14\Dev]

Object Type: [Protec v13\Loop\Dev]

Object Type: [Protec v12\Loop\Dev]

The Protec loop device contains the following objects:

Description	Reference	Type
<b>Device Alarm State</b>	C	Obj\Enum: 0...4; Where: 0=Ok, 1=Isolated, 2=Fault, 3=Pre-Alarm, 4=Fire
<b>Device Ok</b>	C0	Obj\NoYes
<b>Device Isolated</b>	C1	Obj\NoYes; Adjustable on x400 series panels only
<b>Device in Fault</b>	C2	Obj\NoYes
<b>Device in Pre-Alarm</b>	C3	Obj\NoYes
<b>Device in Fire</b>	C4	Obj\NoYes
<b>Damper Activated</b>	C5	Obj\NoYes

## Compatibility Objects

A Protec loop device also contains the following objects for backward compatibility.

Description	Reference	Type
<b>Device Value</b> Device alarm state	V1	Obj\Enum Value: 0=OK, 8=Damper activated, 13=Supply fault, 15=Detector fault, 20=Device Isolated, 21=Pre-Alarm, 22=Fire
<b>Device in Fault <i>b</i> condition</b> The fault condition, <i>b</i> , is in the range 8...22, where: 8=Damper activated, 13=Supply fault, 15=Detector fault, 20=Device Isolated, 21=Pre-Alarm, 22=Fire	F <i>b</i>	Obj\NoYes
<b>Isolate Device</b> Object available in x400 series panels only	I	Obj\NoYes: Adjustable only

# Protec Driver Setup (Historic version)

Object Type: [OSM v20\Protec v13]

Object Type: [CDM v20\Protec v13]

Object Type: [OSM v20\Protec v12]

Object Type: [CDM v20\Protec v12]

The Protec driver (version 1.3 and 1.2) contains the following objects:

Description	Reference	Type
<b>RS232 COM port</b>	RS.COM	Obj\Num: 1...8; Adjustable
<b>Baud rate</b>	RS.BR	Obj\Num: 1200...9600; Adjustable
<b>System label</b> Label displayed when scanning the system and within alarms	DL	Obj\Text: 20 Chars; Adjustable
<b>Comms online</b> Indicates whether communication is established with the panel	DS	Obj\NoYes
<b>Panel type</b> Select the series of Protec panel connected	P.T	Obj\Enum: 0...1; Where: 0=6300/AN95, 1=6400/5400
<b>Alarm point field</b> Selects source of the alarm message point field	AT	Obj\Enum: 0...1; Where: 0=PLD reference,1=Detector label
<b>Ignore isolations</b> Enable to ignore isolation events from the system. This provides more event storage for fire and fault conditions	II	Obj\NoYes; Adjustable
<b>Ignore damper events</b> Disable to receive damper events from the system. Available in driver version 1.3 or later	IDP	Obj\NoYes; Adjustable
<b>Event storage available</b> Each event from the system must be remembered by the driver. <b>If no storage is available for a new event, the driver will not be able to remember it.</b>	SC	Obj\Num: 0...480
<b>Resync driver</b> Clears the internal database and re-requests the current state from the Protec system	RST	Obj\NoYes; Adjustable

# Driver Versions

Version	Build Date	Details
1.0	1/9/2000	Driver released
1.1	9/8/2007	Added damper control status objects (6000 damper interface)
1.2	25/10/2010	Increased database size. Added System object (P) and moved zones from per panel to this common object. Updated driver to use new North fire object model. Added objects to ignore isolations, event free count, and resync. 6300 panels now supported with panel firmware after March 2009.
1.2	24/9/2011	Alarm events now include more text from panel
1.3	28/5/2013	Updated for protocol issue 15 – new events Improved damper support Added ignore damper events object
1.3	11/2/2015	Updated for protocol issue 16 – removed unused alarms Added support for MICCO damper states Resolved issue when setting output group to ‘off’
1.4	1/3/2016	Updated for protocol issue 18 Added support for Algo-tec 6000PLUS protocol (version 3) Added support for zone part-isolation (added objects Zx.C1.A and .M) Added support for larger MICCO modules Increased event storage Driver object IDP changed to EDP (Enable damper events) Driver object ETD (Enable platform time sync) added Driver object AP (prefix loop/dev alarms with panel number) added Added support for more events – passed as alarm messages

## Next Steps...

If you require help, contact support on 01273 694422 or visit [www.northbt.com/support](http://www.northbt.com/support)



North Building Technologies Ltd  
+44 (0) 1273 694422  
support@northbt.com  
www.northbt.com

This document is subject to change without notice and does not represent any commitment by North Building Technologies Ltd.

ObSys and Commander are trademarks of North Building Technologies Ltd. All other trademarks are property of their respective owners.

© Copyright 2016 North Building Technologies Limited.

Author: BS  
Checked by: JF

Document issued 15/06/2016.